

SHOCK TUBE BLOCK REPLACEMENT – NOT FOR END USERS

The Nonel block needs careful maintenance. From our test, the needle should last for about 200 shots, and after that, it needs to be replaced.



Remove the old block from MICKO 1 DUAL unscrewing the screws on the front with an Allen key (rotate anticlockwise).



The springs on the back automatically release the block. Make sure that the new block springs have good electric contact, or the spark won't take place. Take a brand new block and place it paying attention to insert the screws and the springs in the correct holes. Screw (rotate clockwise) to settle the new block.

Test the new block with a >10 cm length of shock tube (without detonator). The shot should be sharp and loud; if no spark is generated please double check the spring contacts.